

# MIDLAND METROLOGY LIMITED

---

## Magnetic Disk

### MD Magnetic Disk

---

**Function Upper surface:** With magnetism, connected by magnetism with anti sticking disk.

**Function Lower surface:** Connected to aluminum or iron plates on polishing machines/pre-grinding machines with non drying adhesive.



### Technical Specification

---


Size:  $\Phi$  203/220/230/250/300mm

---

Package: 5PCS/Box

---

---

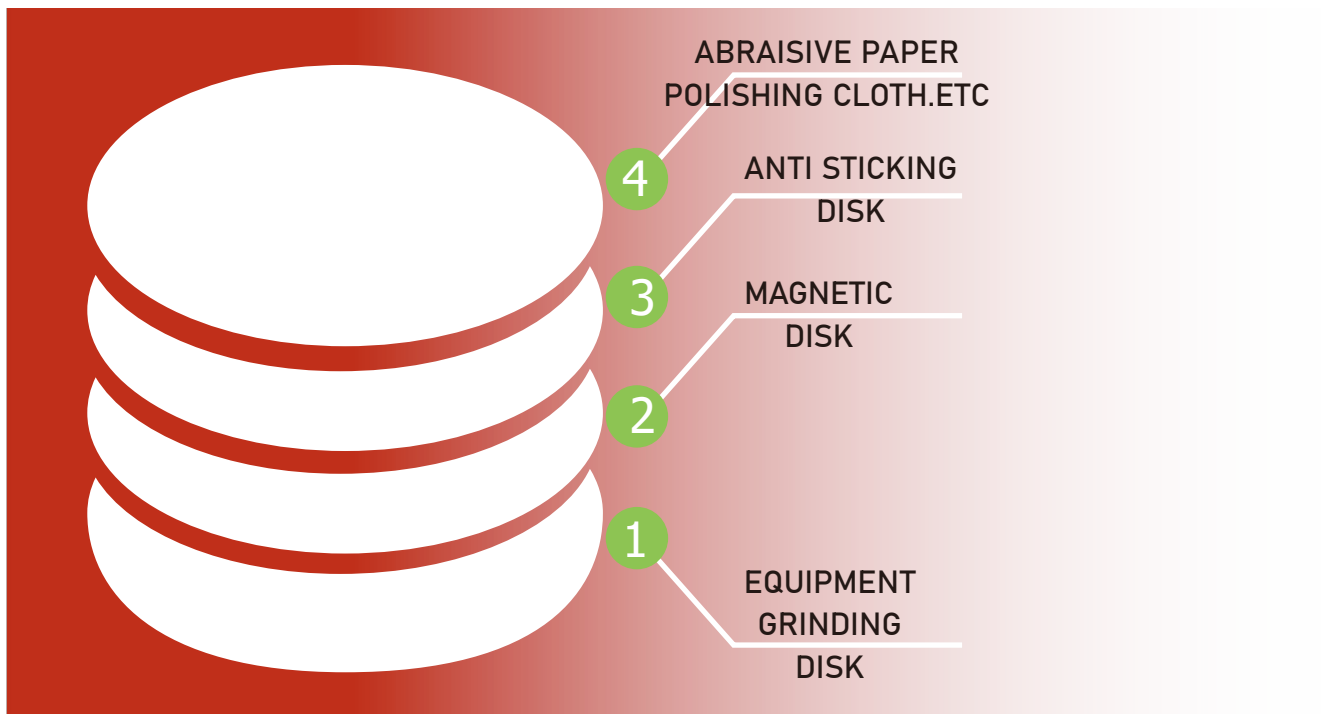

**Usage:**

1. Clean the surface of the aluminium/iron disk of the polishing machine of residual glue, oil, foreign matter, etc.;
2. Use the adhesive backing on the lower surface of the magnetic disk to bond the magnetic disk to the aluminium/iron disk of the grinding and polishing machine.
3. Use the self adhesive polishing cloth/abrasive paper to bond the polishing cloth/abrasive paper to the non-stick disk.
4. If the polishing cloth or abrasive paper needs to be replaced, remove the polishing cloth or abrasive paper from the anti-sticky disk through the notch of the anti-sticky disk.
5. If the polishing cloth or abrasive paper can be used again, but need to change the abrasive paper grain size or the type of polishing cloth, remove the anti-adhesive disk (with polishing cloth or abrasive paper on it) from the notch of the magnetic disk, and replace it with another anti-adhesive disk (with other Specifications of polishing cloth or abrasive paper on it).